



MEYTON
ELECTRONIC TARGETS

Brief operation instructions


Installation and comissioning MEYTON system

Congratulations on your new Meyton system!


We are pleased that you have chosen a Meyton product and wish you much pleasure with it!

This short manual should help you to set up your system properly and to establish a connection to a terminal device or a shot display. If you install a system consisting of several Meyton systems, additional devices (switch, etc.) are required.


Scope of delivery

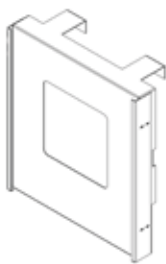

1 x Lighting Box

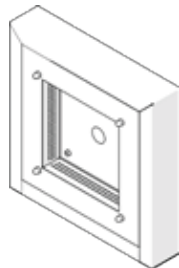


1 x Electronic target MF5R1

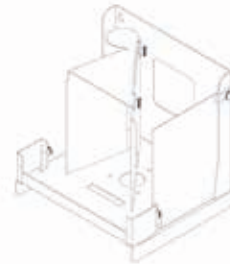


1 x Bullet trap




1 x Connection cable for lighting

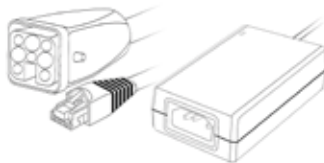


1 x Connection cable electronic target
incl. 24V-Connector power supply

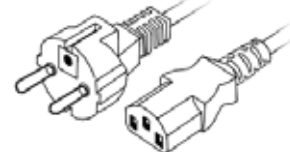

1 x Power supply cable

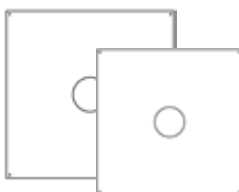

4 x AR/AP Paper target

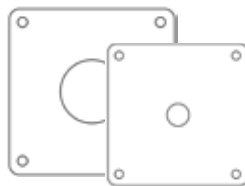

4 x AR/AP foil



4 x Backup target

Optional accessories




1 x RJ45 Coupling



1 x RJ45 LAN-cable




1 x Stand

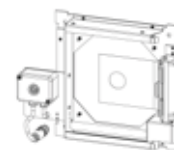


1 x Target changer

Wall mounting of the bullet trap

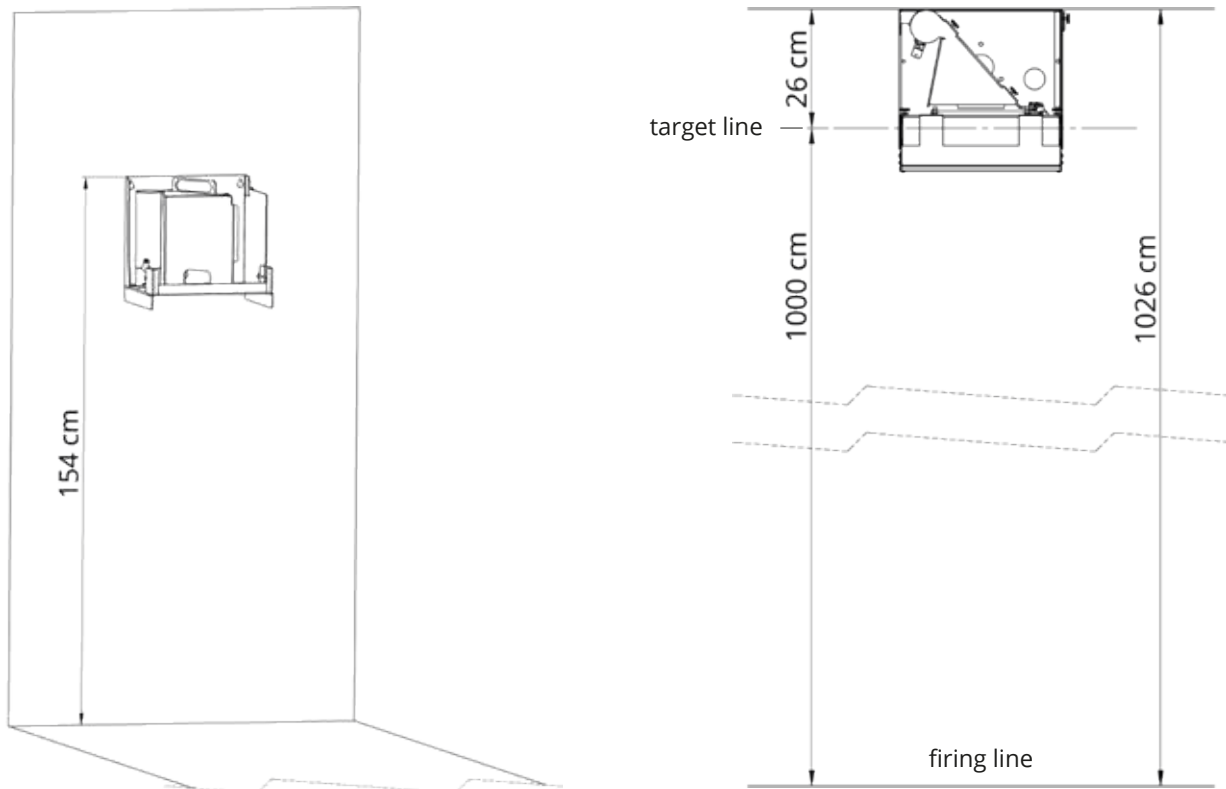

Connecting the devices via LAN / Wifi

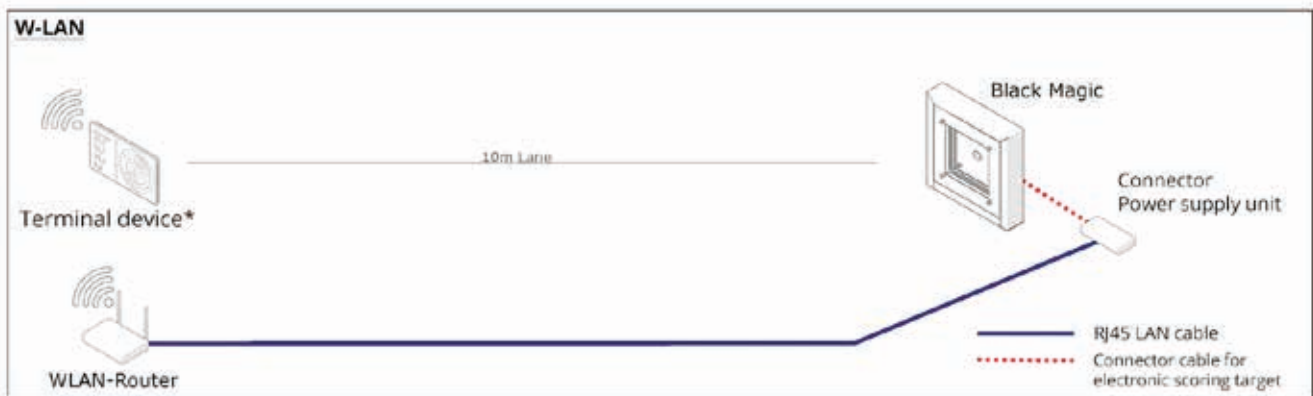

Wall mounting of the electronic target

- Make sure that the electronic target is mounted **horizontally**.
- Use **suitable fasteners**, depending on the nature of the substrate.
- The fasteners must be designed for a **load capacity of at least 18kg**.

Configuration of the terminal devices

- In the network configuration of the terminals, set the assignment method of the IP address on „**static**“. We recommend for the end device the **IP address 192.168.10.1** (or **.10.2, .10.3**, etc.) with **network mask 255.255.0.0**
- For configurations with internet router, use the setup guide to find in the download section under „ESTA5“ on **www.meyton.info/en/download**.

Starting ESTA5 in the web browser

- a) Open the web browser.
- b) Enter the **IP address of the electronic target** in the address bar (usually 192.168.11.1).
You will find the IP address on a sticker on the back of your electronic target.
- c) Press **[Enter]**.

Troubleshooting

A connection to the ESTA5 start screen can not be established.

- Check that you have entered the correct IP address (for example 192.168.11.1) in the web browsers address bar.
- In the terminals network settings, check whether the connection type is set to „static“ (Windows: „manual“). This is to prevent that no IP address is assigned via DHCP.
- Clear the web browsers cache. Then restart the web browser.

While in Wifi, the connection to the electronic target breaks off.

- In the routers settings, set options from „Auto Channel“ to a fixed channel that is as stable as possible. You can find more details in our FRITZ! box instructions under www.meyton.info/en/download/.

Any further questions?

Detailed instructions can be found at **www.meyton.info**

E-Mail support: **support@meyton.de**

Phone: +49 (0) 5226 98 24 **-24** or **-25**

